



## Motor Programming Function and Pairing Motor to Remote

Both the track and your remote should already be paired at time of manufacture.

It is recommended to pair motor and remote before track is installed to avoid working around any further obstructions.

Press and hold button (approx. 2 seconds)


Green light flashing, motor is now ready to pair to remote.



Press and hold button on motor - button on left hand side of motor.

**Note:** this will be positioned at top of motor and should be done prior to installing track, if not done prior to install, it will be difficult to get to the button. E.g. if the track is installed into a bulkhead.

Light on motor will flash approx. 2 seconds, motor and remote are now ready to be paired.

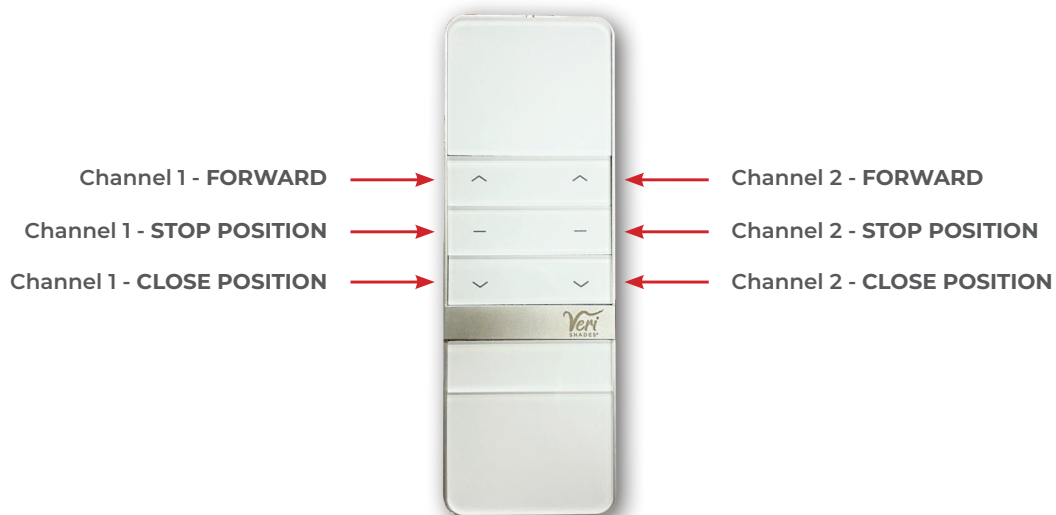

- Remote: Press and hold stop button (on corresponding channel) approx. 2 seconds
- Light will flash (Note: this is a green light)
- Your motor will now be paired
- Press forward button to ensure track is traversing
- Let it run through its full cycle (forward and back)
- Motor should beep on completion (which will ensure the track is now paired)