


## Additional Fold Wrap Installation Instructions

Un-roll the fabric.

You will have 2 folds that are opened fully with different clips on them.


( The additional piece will be removed (1) )

This paper will be above them

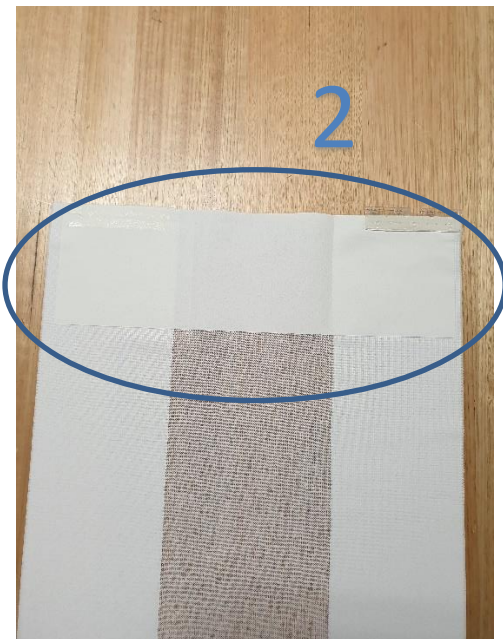

---

Flip so the side with the stiffening tape is showing. (2)

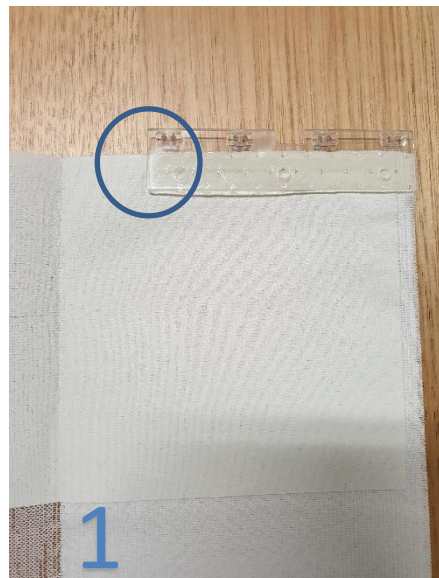




Fold the solid section over the opposite side. Followed by the side without the clip attached to form onefold. (3)



Finally fold the side without the clip as shown (4)

The additional fabric should not be visible from the side of the Veri Shades® (5)

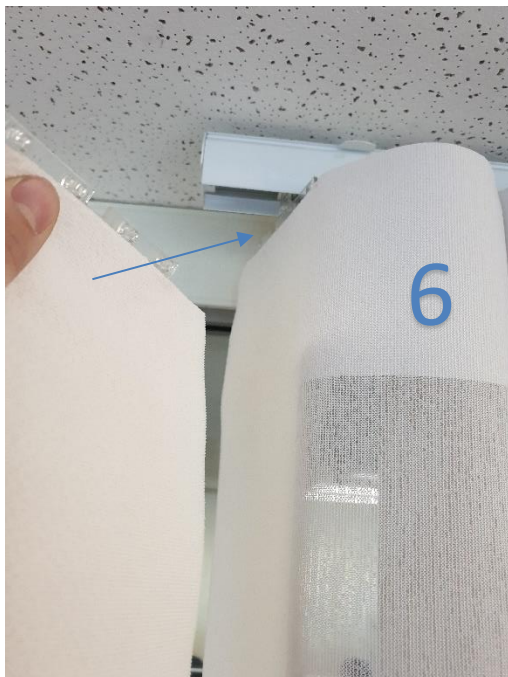

Place the end fold on to the final clip – Catching the loose fabric between the clips, you may need to use force (6)

(For both ends)

This will have the effect of the sheer section covering the clip and finishing off the Veri Shades®.

